

Odyss N1 Beta Quick Start

Set up Odyss N1, install the Beta App, pair your device, and start using Today in a few minutes.



Hardware	Odyss N1 Beta Unit	App	Odyss Beta App v0.1
Region	North America Beta	Last Updated	May 11, 2026


Quick Start PDF is part of the Odyss Beta support system. It is designed for Beta testers, crowdfunding supporters, media, and partners who need a clear view of the current hardware, App flows, privacy controls, and support process.

Before You Begin

- Make sure Bluetooth is enabled on your phone.
- Make sure your phone is connected to the internet.
- Long press the function button to start Odyss N1. If the device does not turn on, charge it with a 5V USB power source first.
- Use the official Odyss Beta App links only.


Five Setup Steps

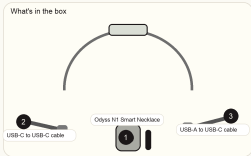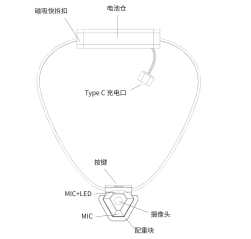	<p>1. Check the box</p> <p>Confirm Odyss N1, one USB-C to USB-C cable, and one USB-A to USB-C cable are included.</p>
	<p>2. Power on</p> <p>Long press the function button to start. If it does not turn on, charge with 5V USB Type-C first.</p>

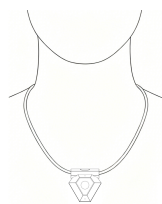


3. Wear correctly

Keep the camera-facing side outward and the battery pod centered behind the neck.

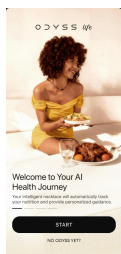

4. Install the App

Install Odys Beta from the official iOS TestFlight or Android Beta link.

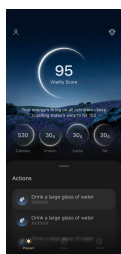

5. Pair and start

Enable Bluetooth, pair the device in the App, and go to Today to start tracking daily nutrition insights.

Install the Odys N1 Beta App

Install on iOS through TestFlight: <https://testflight.apple.com/join/crydBtsB>

Install on Android through the official Beta download: <https://www.pgyer.com/odyssapp>

Beta access is automatically enabled after you create an account and sign in. No activation code, subscription purchase, or additional setup is required for this Beta test.

Pairing Checklist

- Odys N1 is powered on and close to your phone.
- Bluetooth is enabled and the Odys App has Bluetooth permission.
- Your phone is connected to the internet.
- Open the App, go to the device connection page, search for nearby devices, select Odys N1, and wait for connected or activated status.

Privacy Mode

After the device is connected, tap DEVICE in the upper-right corner, enter Work Mode, and choose Auto Mode or Privacy Mode. Privacy Mode turns off the camera and microphone and does not record visual or audio information.

Quick Troubleshooting

Problem	What to try
Device cannot power on	Long press the function button. If it still does not turn on, charge with a 5V USB power source and check the USB-C cable and port.
App cannot find Odys N1	Turn on Bluetooth, keep the device close, restart the App, and check Bluetooth permission.
Pendant tilts upward	Center the battery pod behind the neck, untwist the cord, and check the counterweight.
Analysis looks incorrect	Take a screenshot and send feedback to Odys Beta Support.

Support

support@odyss.life

Odys is for general wellness and lifestyle reference only. It is not a medical device and is not intended to diagnose, treat, cure, or prevent any disease.